

What You Need for CGR Filter Cloth Installation

Cloth change-out is critical to efficient, effective press operations. Micronics provides you with both the tools and "How-To" tips to make CGR Filter Cloth Installation & Removal much easier.

Check-out our new How-to Videos on the [Filter Cloth Overview](#) page on the Micronics website, and see how Micronics can help you minimize operator fatigue during CGR Filter Cloth Installation.

Micronics Model AH-1 Air Hammer – PN #005752



- Allows for the least amount of fatigue for press operators – a replacement for cumbersome hammers and mallets
- Delivers over 1000 blows per minute
- Interchangeable tips
- Lightweight at 2 lbs
- Easily held in palm of hand
- Operating pressure: 50-125 psi
- Air consumption: 2-4 cfm

Tip Options for AH-1 Air Hammer



Steel Tip
PN #009183



Aluminum Tip
PN #009848



Hard Plastic Tip
PN #007078

Micronics Polypropylene Wedges

Used in conjunction with the Micronics Air Hammer to make filter cloth installation even easier




PN #006078



PN #006079

Polypropylene Cloth/Cake Cleaning Spatulas (Scrapers)

Used to loosen or discharge filter press cake from the filter cloth. Note: Sharp metal scrapers will damage cloth and shorten the life of all filter media. Only polypropylene should be used.

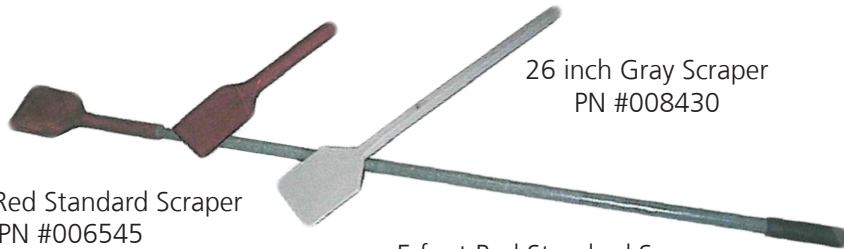

12 inch Red Standard Scraper
PN #006545

26 inch Gray Scraper
PN #008430

5 foot Red Standard Scraper
plus 5 ft. extension
PN #006543